

FORM+



DECORATIVE DOOR ESCUTCHEON PLATE

FP-56DE-XX-XX

FORM+ Standard Care Instructions

- Follow installation instructions carefully; improper installation may void warranty.
- Use only mild, non-abrasive cleaners.
- Dry surfaces after cleaning to prevent spotting or finish damage.
- Never use steel wool, wire brushes, or abrasive pads.
- Inspect products regularly for wear, leaks, or damage.
- Always use genuine FORM+ replacement parts.
- Contact FORM+ customer service at support@formplusdesign.com for guidance.