

FORM+



MOTION SENSOR SURFACE MOUNT LED LIGHT

FP010-SENSOR-XX

FORM+ Care & Maintenance – Lighting (Decorative & Recessed Fixtures)

General Cleaning

- Turn off power before cleaning.
- Use a soft, dry cloth to dust regularly.
- Glass shades: Wash with warm water and mild detergent.
- Metal finishes: Wipe with damp cloth and dry immediately.

Integrated LED Fixtures

- Do not attempt to open sealed LED housings.
- Wipe exterior only.
- Consult FORM+ or electrician if LEDs fail.
- Avoid moisture unless fixture is wet-rated.

Maintenance Tips

- Check mounting hardware annually.
- Inspect wiring during bulb or component replacement.
- Use only LED-compatible dimmers.