FORM+



## 4" RECESSED LIGHT WITH BAFFLE TRIM

FP-CA04-T10W

# FORM+ Care & Maintenance – Lighting (Decorative & Recessed Fixtures)

#### **General Cleaning**

- Turn off power before cleaning.
- Use a soft, dry cloth to dust regularly.
- Glass shades: Wash with warm water and mild detergent.
- Metal finishes: Wipe with damp cloth and dry immediately.

### **Integrated LED Fixtures**

- Do not attempt to open sealed LED housings.
- Wipe exterior only.
- Consult FORM+ or electrician if LEDs fail.
- Avoid moisture unless fixture is wet-rated.

#### **Maintenance Tips**

- Check mounting hardware annually.
- Inspect wiring during bulb or component replacement.
- Use only LED-compatible dimmers.