

FORM+

INSTRUCTION MANUAL

---








**SURGE |  
BATHROOM SINK  
FAUCET**

SKU: 25-8679-XX

# INSTALLATION MANUAL

Single Hole Bathroom Sink Faucet

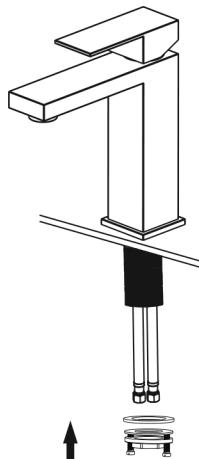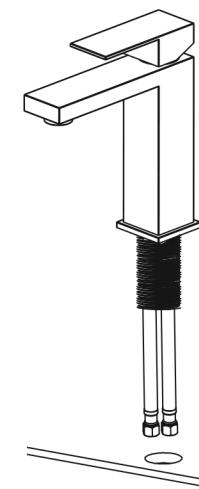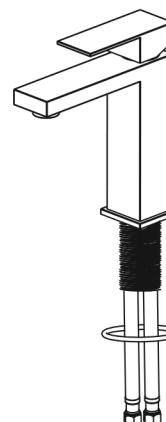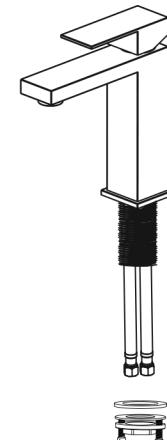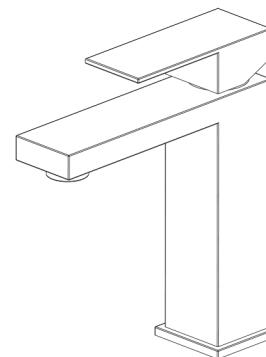

## Tools you will need



Phillips Screwdriver



Safety Goggles



Silicone Sealant



Adjustable Wrench

### Step 1: Remove mounting hardware

Remove the mounting screws, mounting nut, and rubber & metal washer from the mounting pipe

### Step 2: Faucet installation

**For three-hole installation:** Install deck plate, base plate, and silicone sealant (optional)  
**For single-hole installation:** Install base plate





### Step 3: Install faucet body

Insert faucet body into hole in countertop or deck plate

**Pre-drilled hole size:**  
1-3/8" (min) – 1-1/2" (max)  
**Max countertop thickness:**  
1-3/8"

### Step 4: Install mounting hardware

Install mounting hardware from underneath the countertop to the faucet

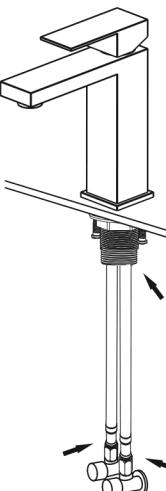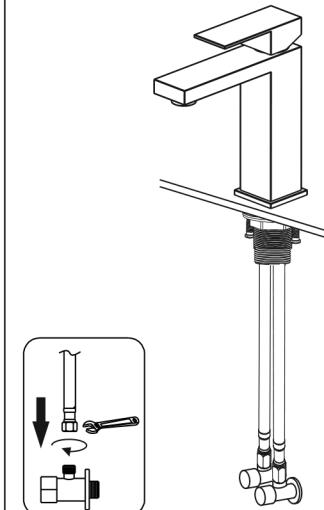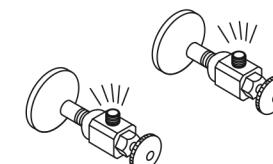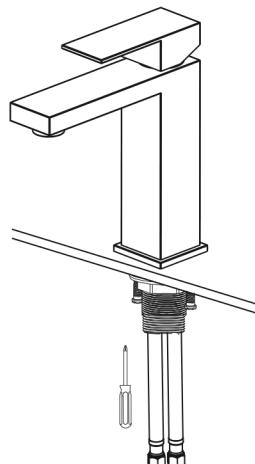

### Step 5: Secure mounting hardware

Adjust direction of faucet body so that handle is on right side of faucet. Tighten mounting nut and mounting screws with Phillips screwdriver until snug

### Step 6: Flush angle valves

Open the angle valves for a few seconds to flush out any dirt or debris before installation.

### Step 7: Connect waterlines

Connect waterlines to angle stops. Tighten both ends of waterlines with a wrench until snug.

### Step 8: Flush the body and check for leaks

Remove aerator from spout. Turn faucet on and let the water run for 60 seconds to flush any debris. Check for leaks at the connections. Retighten if necessary.

### Care & Maintenance

\*To keep the product clean & shining, follow the steps below:

1. Rinse with clean water & dry with a soft cloth
2. Do not clean with soap, acid polish, abrasives, or harsh cleaners
3. Do not use cloth with a coarse surface
4. Unscrew the aerator and clean when necessary



# **Thank You for Choosing FORM+**

For additional support, please visit our  
website.

[www.formplusdesign.com](http://www.formplusdesign.com)